



BlackBox User Manual

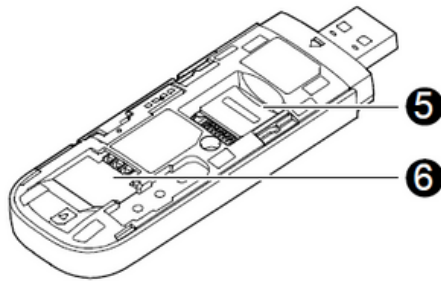

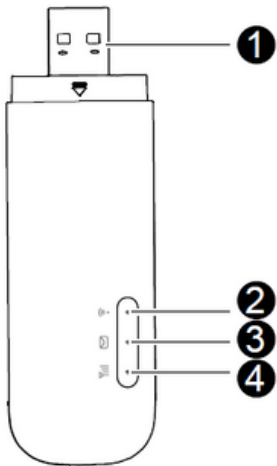






Setting up the 4G Key

Introducing the 4G Key




1. USB connector
2. WiFi indicator
3. SMS indicator
4. 2G/3G/LTE indicator
5. MicroSD card slot
6. SIM card slot

2G/3G/LTE indicator


-  Rapid green flashing = 4G key update
-  Slow green flashing = Currently connecting to a 2G network
-  Steady green = Connected to a 2G network
-  Slow blue flashing = Currently connecting to a 3G network
-  Steady blue = Connected to a 3G network
-  Slow cyan flashing = Currently connecting to a 4G/LTE network
-  Steady cyan = Connected to a 4G/LTE network

Inserting the SIM card


1. Remove the removable part of the E8372 LTE key by sliding it

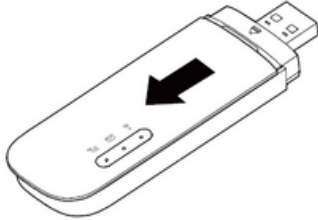

2. Insert your SIM card in the slot (6) **Make sure you have removed the SIM PIN.**

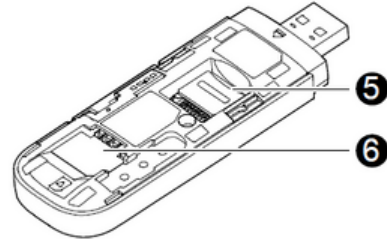

3. Slide the removable part back into place..

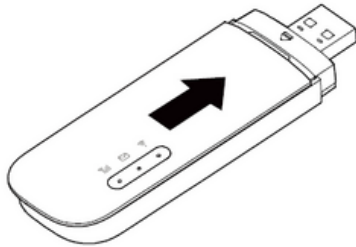

4. Connect the E8372 LTE key to one of your computer's USB ports.

 


5. The drivers are installed automatically in the background.

When installation is complete, the E83712 key management web page (<http://huawei.setup> or <http://192.168.8.1>) opens and the E8372 LTE key automatically connects to the LTE network.

Note :

- If the driver installation does not start automatically, locate the AuroRun.exe file in the driver folder and double-click to run it.
- The default username and password for the device management page are admin and 1Password.




6. Check that the 4G key is properly connected to the network.



System Installation

1. Connect the 4G key and the camera to the system

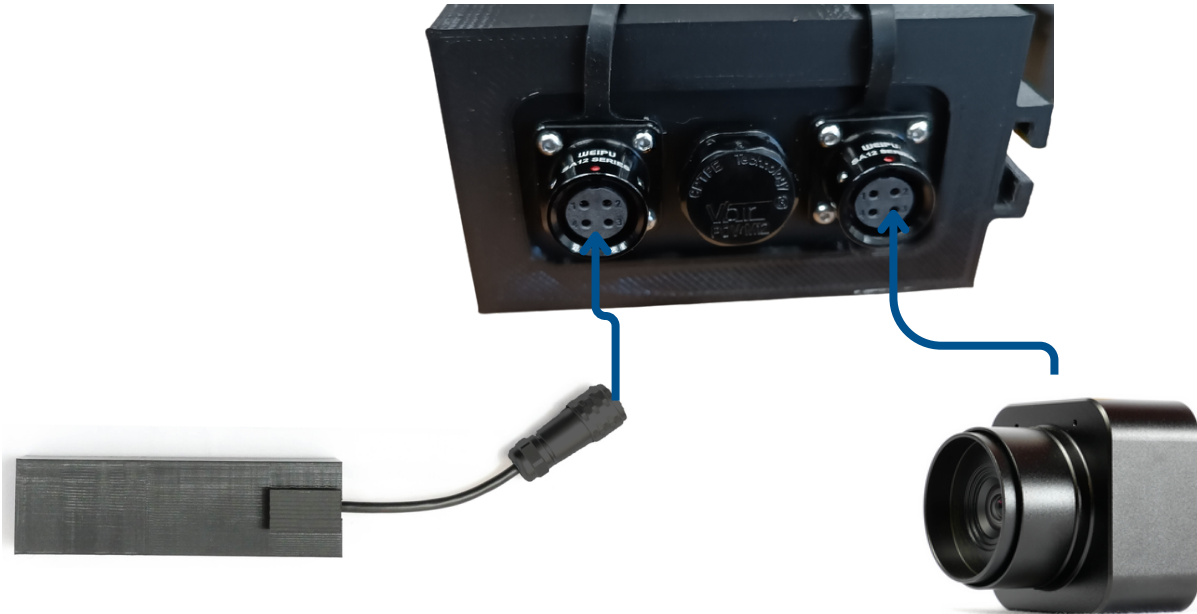


Note: The two ports can be reversed.

2. Connect the power supply to the system



Connection from a computer

1. Go to the following address : <https://login.gotek7vision.com>
2. Log in using the login details sent to you by email.

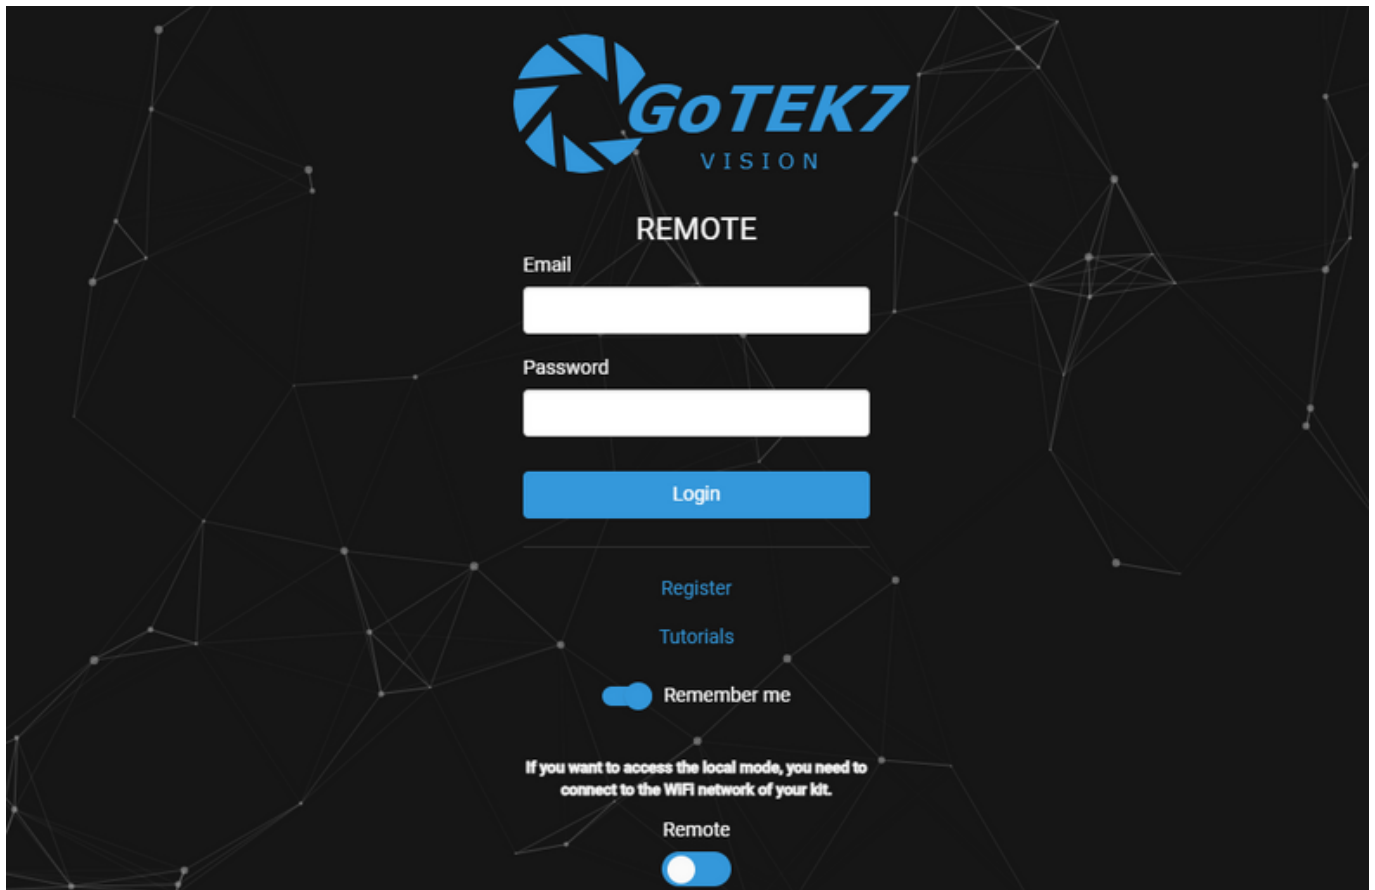

GoTEK7
VISION

REMOTE

Email

Password

Login

Register

Tutorials

Remember me

If you want to access the local mode, you need to connect to the WiFi network of your kit.

Remote

First connection :

When you placed your first order, we asked for your e-mail address to create your account. After your account was created, an e-mail containing your first login password was sent to you.

To ensure the security of your account, you must change this password after your first connection.

GoTEK7

Security Solutions

Connection from a Smartphone

1. Download the GoTEK7 vision application available on iOS and Android



2. Log in with your login details.

GoTEK7
VISION

REMOTE

Email

Password

Login

[Register](#)

[Tutorials](#)

Remember me

If you want to access the local mode, you need to connect to the WIFI network of your kit.

Remote

First connection :

When you placed your first order, we asked for your e-mail address to create your account. After your account was created, an e-mail containing your first login password was sent to you.

To ensure the security of your account, you must change this password after your first connection.